




Ford FE Bracket Kit Kit #19020, 19025

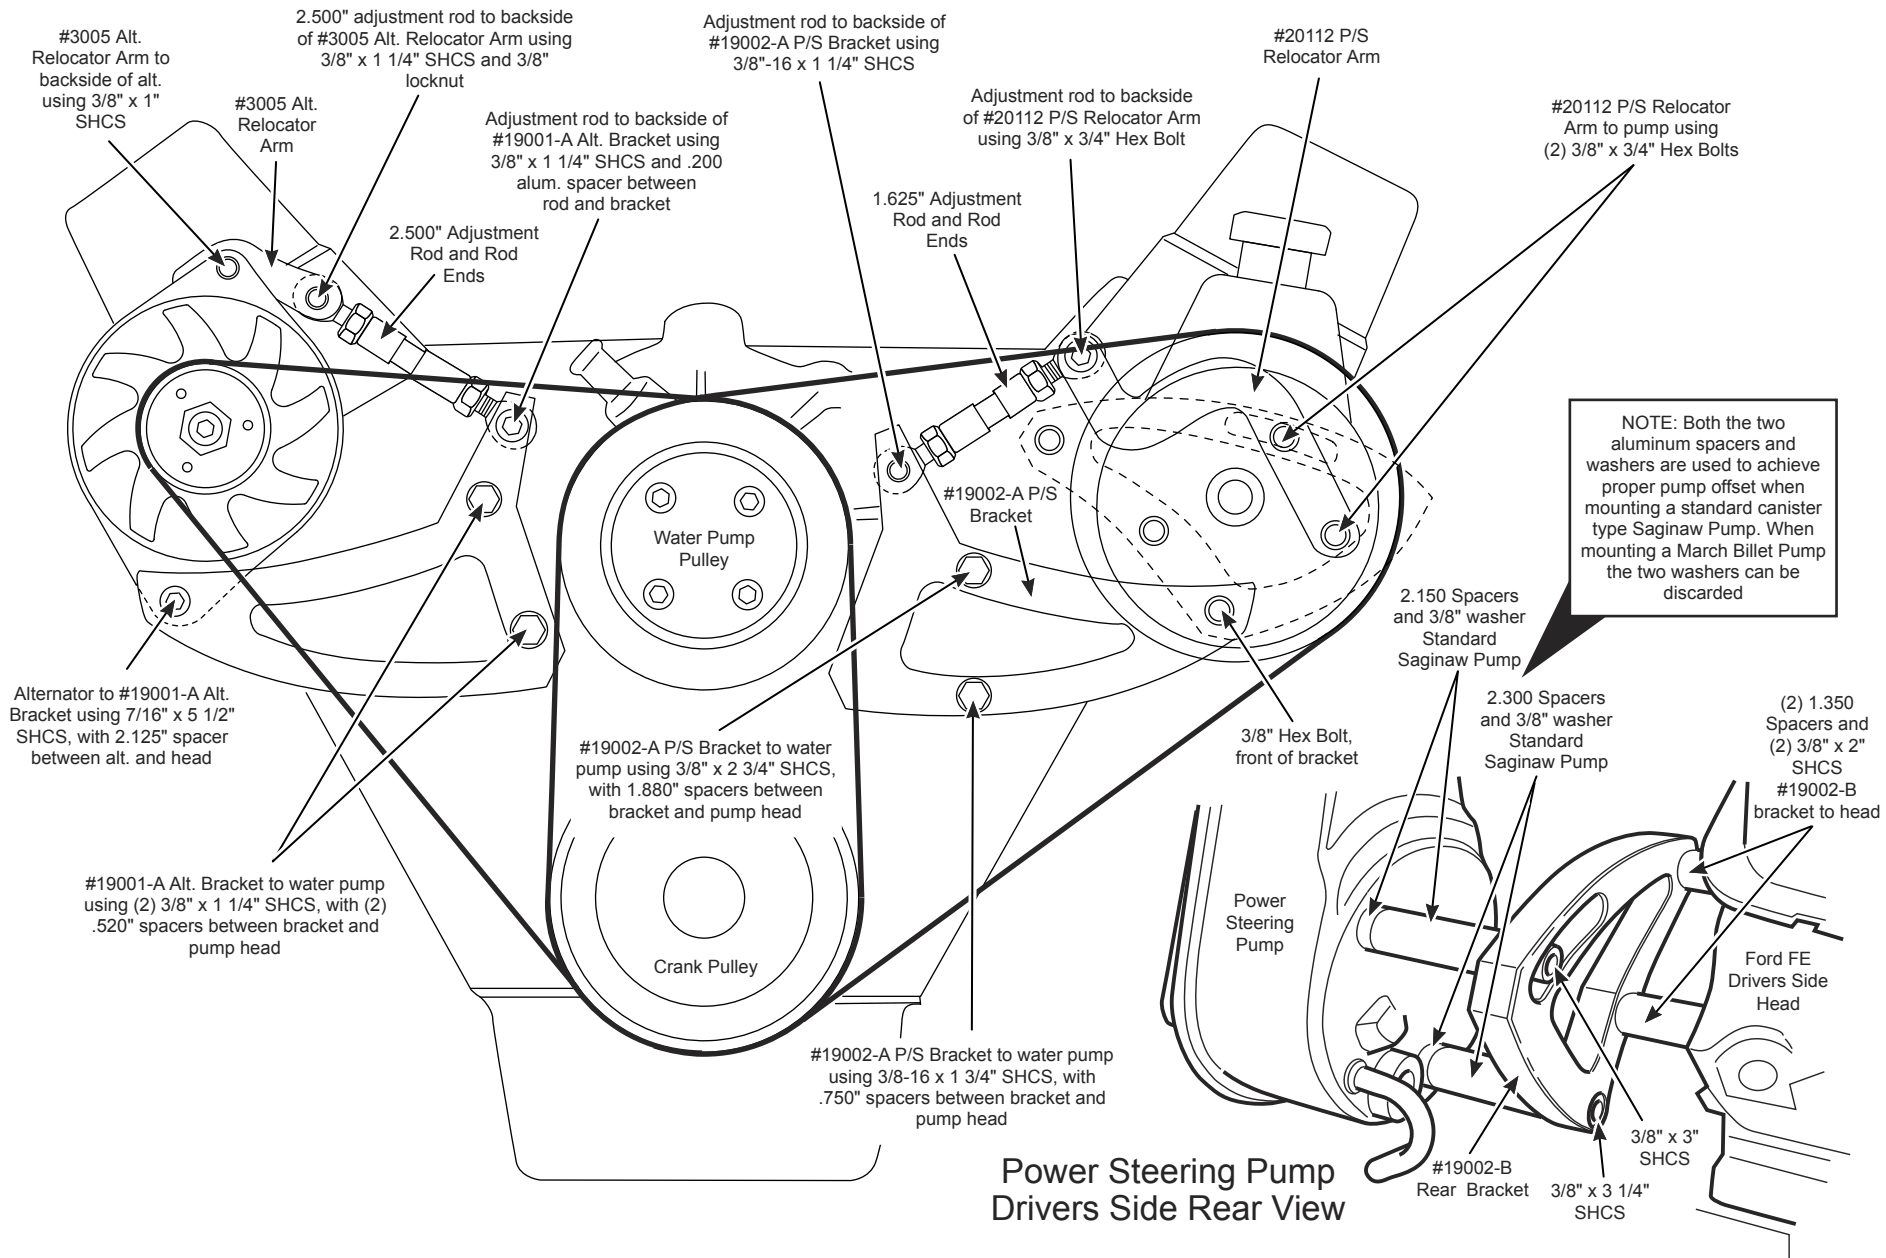

NOTE: Both the two aluminum spacers and washers are used to achieve proper pump offset when mounting a standard canister type Saginaw Pump. When mounting a March Billet Pump the two washers can be discarded

Power Steering Pump Drivers Side Rear View